


E-Class Skylight Installation Decal



STEP 1

Lift flange, snap brackets into channel under flange. Space equally and screw to roof deck. (see chart below)


SIDE	BRACKETS PER SIDE
22"	2
30"	2
38"	3
46"	3

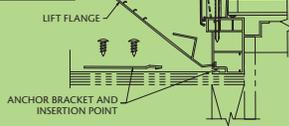

STEP 2

Place flange OVER shingles on bottom side. Nail bottom edge of flange, spaced about 6" apart. FLANGE IS SELF SEALING AROUND NAIL PENETRATIONS. If desired you may add a cosmetic shingle across flange.


BOTTOM

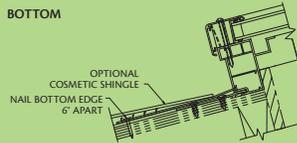

STEP 3

Tuck shingles UNDER L-Gasket on sides, and nail. FLANGE IS SELF SEALING AROUND NAIL PENETRATIONS.


SIDE

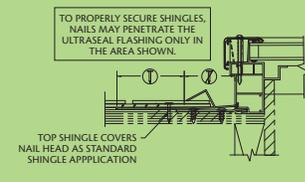

STEP 4

At the top, nail inverted shingle(s) OVER the L-Gasket. Next, shingle over the inverted shingle. FLANGE IS SELF SEALING AROUND NAIL PENETRATIONS. Keep back approximately 3/4"-1".

TOP

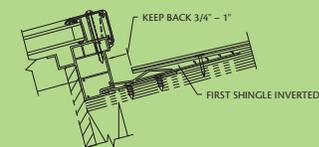

INSTALLATION VIDEO
www.wascoskylights.com

**MOUNT UNIT
THIS END UP**

**READ INSTRUCTIONS
DO NOT LIFT
SKYLIGHT
BY FLANGE**

IMPORTANT

- Use brackets and screws provided to attach to roof deck.
- Do not use any mastics or cements.
- Do not apply sticky side of self-adhered membrane to flange. Apply sticky side to roof deck only.

PASO 1

Levante el reborde, encaje las escuadras en el reborde. Déje espacios del mismo tamaño.

BORDE	ESCUADRAS POR CARA
22"	2
30"	2
38"	3
46"	3



PASO 2


Coloque el reborde SOBRE las tabillas del lado de abajo. Clave el borde de abajo del reborde, déja un espacio de aproximadamente 6". EL REBORDE SE SELLA AUTOMATICAMENTE ALREDEDOR DE LAS PENETRACIONES DE LOS CLAVOS. Si desea, puede agregar una tabilla cosmética a través del reborde.

PARTE DE ABAJO



PASO 3


Mete las tabillas por DEBAJO de la Junta-L (L-Gasket) en cada lado, y clave. EL REBORDE SE SELLA AUTOMATICAMENTE ALREDEDOR DE LAS PENETRACIONES DE LOS CLAVOS. EL LADO

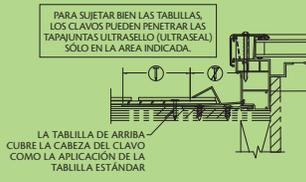

PASO 4

En la parte de arriba, clave la tabilla invertida SOBRE la Junta-L (L-Gasket). Coloque otra tabilla sobre la tabilla invertida. EL REBORDE SE SELLA AUTOMATICAMENTE ALREDEDOR DE LAS PENETRACIONES DE LOS CLAVOS. Mantenga una distancia de aproximadamente 3/4"-1".

PARTE DE ARRIBA

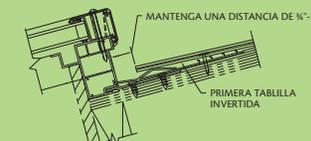

VIDEO DE LA INSTALACIÓN
www.wascoskylights.com

**ESTE LADO
HACIA ARRIBA**

**LEA LAS INSTRUCCIONES
O LEVANTE EL
RAGALUZ POR
EL REBORDE**

IMPORTANTE

- Utilice las escuadras para adjuntar al techo.
- No utilice masticos o cementos.
- No coloque el lado autoadhesivo pegajoso al techo.

**STATIC CLING
WINDOW FILM**